


Power Steering, Dynamic , (1N8)


From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

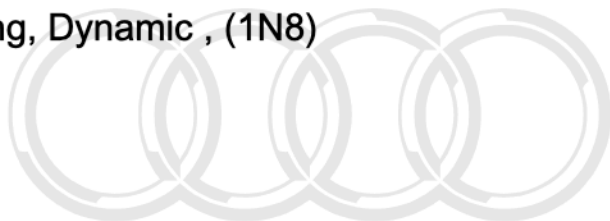

Active Steering Control Module, Active Steering Motor

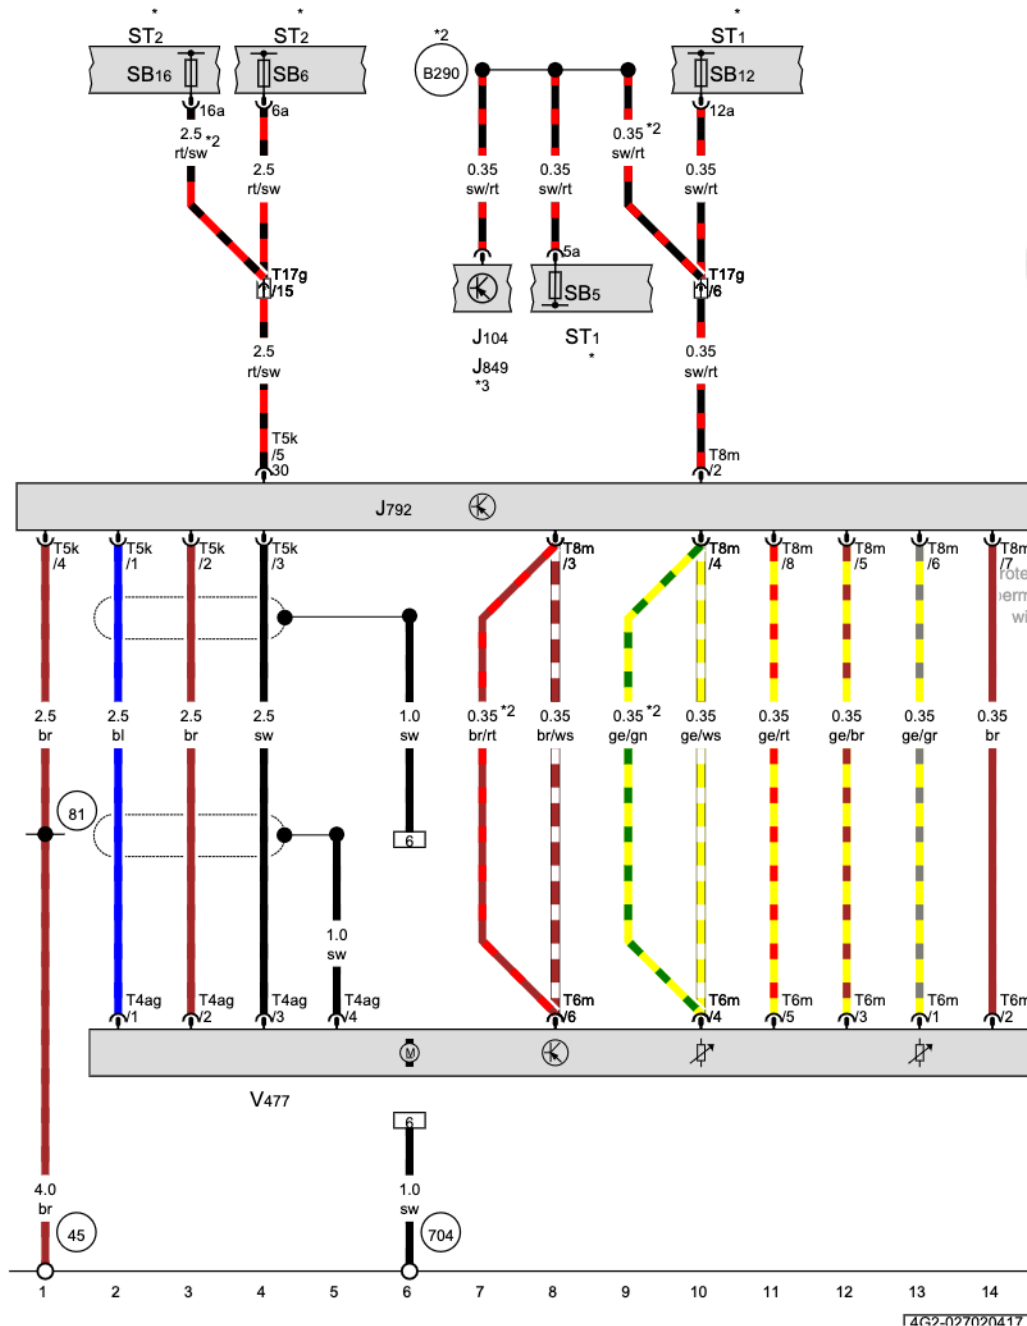


- J104 ABS Control Module
- J792 Active Steering Control Module
- J849 Sensor Electronics Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SB5 Fuse 5 (On Fuse Panel B)
- SB6 Fuse 6 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- SB16 Fuse 16 (On Fuse Panel B)
- T4ag 4-Pin Connector
- T5k 5-Pin Connector
- T6m 6-Pin Connector
- T8m 8-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- V477 Active Steering Motor

- 45 Ground Connection Behind Instrument Panel, Center
- 81 Ground Connection 1 (in Instrument Panel Wiring Harness)
- 704 Ground Connection 2 Under Driver Seat
- B290 Positive Connection 14 (15a) (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 From June 2014
- *3 Refer to Applicable ABS Wiring Diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

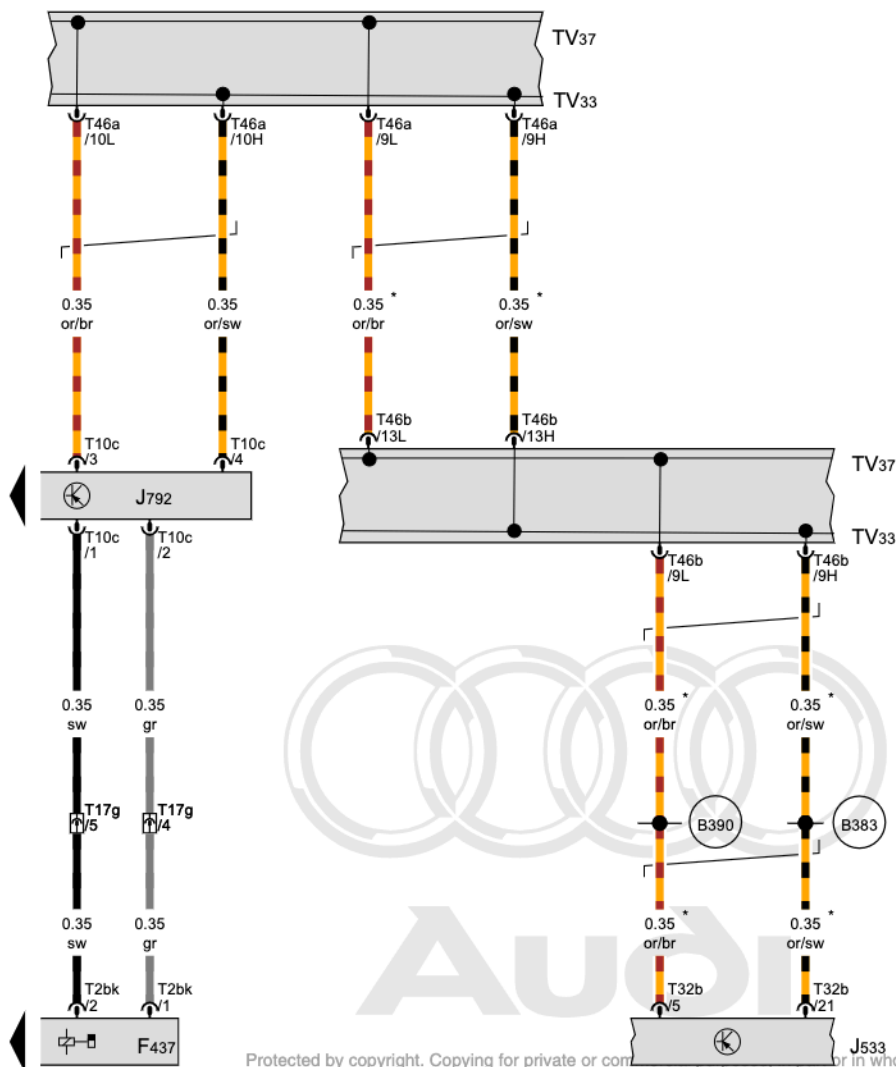

Protected by copyright. Copying for private or commercial use, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Data Bus on Board Diagnostic Interface, Active Steering Control Module, Powertrain CAN Bus High Wire Junction, Powertrain CAN Bus Low Wire Junction, Active Steering Motor

- F437 Active Steering Safety Lock Actuator
- J533 Data Bus on Board Diagnostic Interface
- J792 Active Steering Control Module
- T2bk 2-Pin Connector
- T10c 10-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction
- TV37 Powertrain CAN Bus Low Wire Junction
- V477 Active Steering Motor
- B383 Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
- B390 Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)
- * Data Bus Wire (CAN Bus)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink